RadioShack®

43-3704

5.8 GHz dual-handset expandable 2-line cordless telephone with digital answerer

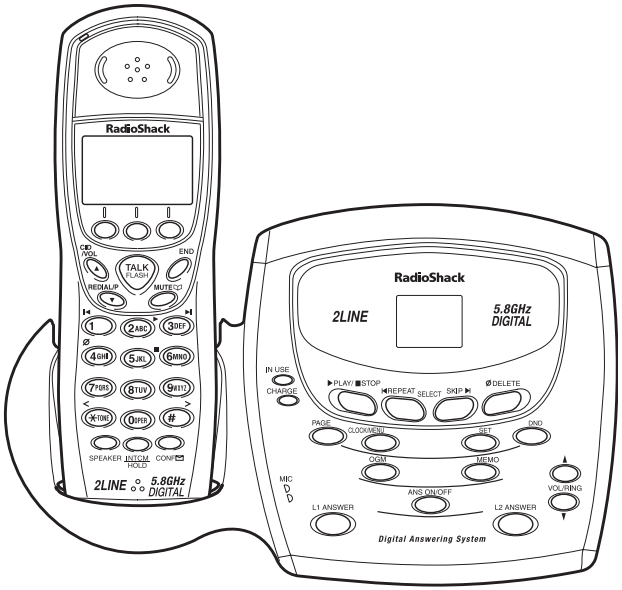

Thank you for purchasing your 2-Line Cordless Telephone with Digital Answerer from RadioShack.

Note: Actual product may vary from the images found in this document.

Please read this user's guide before installing, setting up and using your new product

©2004. RadioShack Corporation.
All rights reserved. RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

43-3704
08A04
UPZZ69727BZ
Printed in China

installing and charging your handset's batteries

1. Remove the battery compartment cover and lift the battery pack out of the compartment.
2. Plug the battery pack's connector into the socket in the compartment (the connector fits only one way), and then place the battery pack in the compartment.

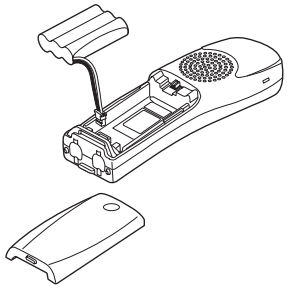

3. Replace the cover.
4. Then, insert the adapter's barrel plug in the DC IN 9V jack on the back of the base, and plug the other end into a standard AC wall outlet.

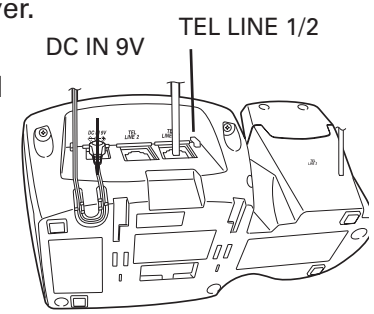

5. Place the handset on the base.

Recharge the battery pack when `Low Battery` flashes on the display. If you have trouble replacing the battery pack, take your phone to your local RadioShack for assistance.

Note: Before using your phone, you must charge it for at least 15-20 hours.

using your phone

Connect to a Phone Line

When the handset battery pack is fully charged, plug the telephone cord into the **TEL LINE 1/2** jack on the back of the base and plug the other end into a telephone wall jack.

Your phone is set for tone dialing. If you have pulse service, please see "Setting the Dialing Mode" on page 29 in your User's Guide.

making a call from the handset

1. Pick up the handset and enter the number.
2. If a pause is required, press **REDIAL/P/▼**. `P` appears in the display, which represents a pause.
3. Press **TALK/FLASH**. The phone automatically will select a free line. To select a particular line, press **LINE1** or **LINE2**.

making a call from the speakerphone

1. Remove the handset from the base.
2. Press **SPEAKER** and listen for the dial tone.
3. Dial the number.

answering calls

1. Remove the handset from the base. (If AutoTalk is on, the phone will answer the call automatically when you pick it up.)
2. Press **TALK/FLASH** or the corresponding key (**LINE1** or **LINE2**).
3. If the handset is off the base, press **TALK/FLASH** or the corresponding key (**LINE1** or **LINE2**).

If **Any Key Answer** is on, you also can press any number key.

RadioShack